
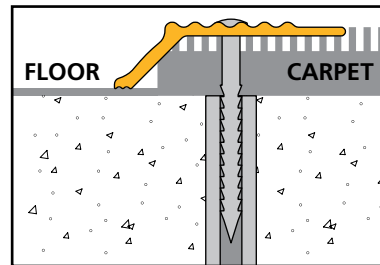



**FITTING INSTRUCTIONS**

1. Cut aluminium to required length with a fine toothed hacksaw.
2. Carefully nail edging into position.

*Note: Hardwood floors may require pilot holes if difficult to nail.  
Concrete will need to be drilled and plugged. Always wear eye protection.*

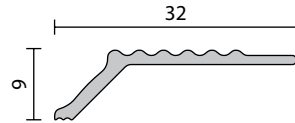

**CONCRETE FLOOR**

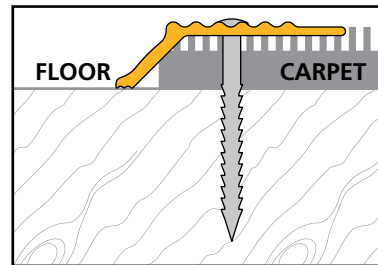

**TIMBER FLOOR**